YAMAHA RX-V10

Natural Sound Stereo Receiver

Récepteur stéréo "Son Naturel"

OWNER'S MANUAL

Thank you for selecting this YAMAHA stereo receiver.

MODE D'EMPLOI

Nous vous remercions pour avoir porté votre choix sur ce récepteur stéréo YAMAHA.

CONTENTS

Safety Instructions .....Inside the Front Cover
Caution 2
Supplied Accessories 3
Features 4
Profile of This Unit 5
Speaker Setup 6
Connections 7
Controls and Their Functions 12
Speaker Balance Adjustment 17
Basic Operations 20
Tuning Operations 22
Preset Tuning 23
Receiving RDS Stations
<Europe and U.K. models only> 26
Using Digital Sound Field Processor (DSP)
.....31
Troubleshooting 35
Specifications 36

TABLES DES MATIERES

Caractéristiques 37
Accessoires fournis 37
Attention 38
Aperçu de cet appareil 39
Installation des enceintes acoustiques 40
Raccordements 41
Les commandes et leurs fonctions.....46
Réglage de la balance des enceintes 51
Fonctionnement de base 54
Syntonisation 56
Syntonisation préréglée 57
Réception des station RDS
<Modèles pour l'Europe et le Royaume-Uni seulement> 60
Utilisation du processeur de champ sonore numérique (DSP) 65
En cas de difficulté 69
Caractéristiques techniques 70

SAFETY INSTRUCTIONS

CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

• Explanation of Graphical Symbols

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert you to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert you to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

1 Read Instructions – All the safety and operating instructions should be read before the unit is operated.

2 Retain Instructions – The safety and operating instructions should be retained for future reference.

3 Heed Warnings – All warnings on the unit and in the operating instructions should be adhered to.

4 Follow Instructions – All operating and other instructions should be followed.

5 Water and Moisture – The unit should not be used near water – for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, etc.

6 Carts and Stands – The unit should be used only with a cart or stand that is recommended by the manufacturer.

6A A unit and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the unit and cart combination to overturn.

7 Wall or Ceiling Mounting – The unit should be mounted to a wall or ceiling only as recommended by the manufacturer.

8 Ventilation – The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, the unit should not be situated on a bed, sofa, rug, or similar surface, that may block the ventilation openings; or placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.

9 Heat – The unit should be situated away from heat sources such as radiators, stoves, or other appliances that produce heat.

10 Power Sources – The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the unit.

11 Power-Cord Protection – Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the unit.

12 Cleaning – The unit should be cleaned only as recommended by the manufacturer.

13 Nonuse Periods – The power cord of the unit should be unplugged from the outlet when left unused for a long period of time.

14 Object and Liquid Entry – Care should be taken so that objects do not fall into and liquids are not spilled into the inside of the unit.

15 Damage Requiring Service – The unit should be serviced by qualified service personnel when:

- **A.** The power-supply cord or the plug has been damaged; or
- **B.** Objects have fallen, or liquid has been spilled into the unit; or
- **C.** The unit has been exposed to rain; or
- **D.** The unit does not appear to operate normally or exhibits a marked change in performance; or
- **E.** The unit has been dropped, or the cabinet damaged.

16 Servicing – The user should not attempt to service the unit beyond those means described in the operating instructions. All other servicing should be referred to qualified service personnel.

17 Power Lines – An outdoor antenna should be located away from power lines.

18 Grounding or Polarization – Precautions should be taken so that the grounding or polarization is not defeated.

19 For US customers only:
Outdoor Antenna Grounding – If an outside antenna is connected to this unit, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

Note to CATV system installer:
This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

EXAMPLE OF ANTENNA GROUNDING

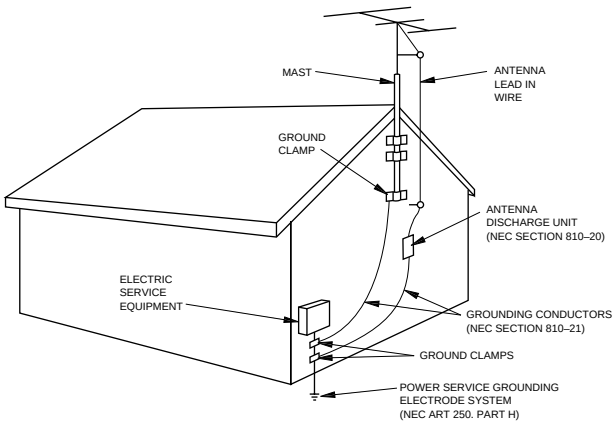
MAST
ANTENNA LEAD IN WIRE
GROUND CLAMP
ANTENNA DISCHARGE UNIT (NEC SECTION 810–20)
ELECTRIC SERVICE EQUIPMENT
GROUNDING CONDUCTORS (NEC SECTION 810–21)
GROUND CLAMPS
POWER SERVICE GROUNDING ELECTRODE SYSTEM (NEC ART 250. PART H)

NEC – NATIONAL ELECTRICAL CODE

SPECIAL NOTES FOR FCC COMPOSITE DEVICE (for US customers only)
This device is a composite system. The digital device component may not cause harmful interference.

FCC INFORMATION (for US customers only)

1. **IMPORTANT NOTICE : DO NOT MODIFY THIS UNIT!**
   This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements. Modifications not expressly approved by Yamaha may void your authority, granted by the FCC, to use the product.
2. **IMPORTANT :** When connecting this product to accessories and/or another product use only high quality shielded cables. Cable/s supplied with this product MUST be used. Follow all installation instructions. Failure to follow instructions could void your FCC authorization to use this product in the USA.
3. **NOTE :** This product has been tested and found to comply with the requirements listed in FCC Regulations, Part 15 for Class "B" digital devices. Compliance with these requirements provides a reasonable level of assurance that your use of this product in a residential environment will not result in harmful interference with other electronic devices.
   This equipment generates/uses radio frequencies and, if not installed and used according to the instructions found in the users manual, may cause interference harmful to the operation of other electronic devices.

Compliance with FCC regulations does not guarantee that interference will not occur in all installations. If this product is found to be the source of interference, which can be determined by turning the unit "OFF" and "ON", please try to eliminate the problem by using one of the following measures:

Relocate either this product or the device that is being affected by the interference.

Utilize power outlets that are on different branch (circuit breaker or fuse) circuits or install AC line filter/s.

In the case of radio or TV interference, relocate/reorient the antenna. If the antenna lead-in is 300 ohm ribbon lead, change the lead-in to coaxial type cable.

If these corrective measures do not produce satisfactory results, please contact the local retailer authorized to distribute this type of product. If you can not locate the appropriate retailer, please contact Yamaha Electronics Corp., U.S.A. 6660 Orangethorpe Ave, Buena Park, CA 90620.

The above statements apply ONLY to those products distributed by Yamaha Corporation of America or its subsidiaries.

We Want You Listening For A Lifetime (for US customers only)

YAMAHA and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion – and, most importantly, without affecting your sensitive hearing.

Since hearing damage from loud sounds is often undetectable until it is too late, YAMAHA and the Electronic Industries Association's Consumer Electronics Group recommend you to avoid prolonged exposure from excessive volume levels.

CAUTION : READ THIS BEFORE OPERATING YOUR UNIT.

1. To assure the finest performance, please read this manual carefully. Keep it in a safe place for future reference.

2. Install this unit in a cool, dry, clean place – away from windows, heat sources, sources of excessive vibration, dust, moisture and cold. Avoid sources of humming (transformers, motors). To prevent fire or electrical shock, do not expose the unit to rain or water.

3. Never open the cabinet. If something drops into the set, contact your dealer.

4. Do not use force on switches, controls or connection wires. When moving the unit, first disconnect the power plug and the wires connected to other equipment. Never pull the wires themselves.

5. The openings on the cabinet assure proper ventilation of the unit. If these openings are obstructed, the temperature inside the cabinet will rise rapidly. Therefore, avoid placing objects against these openings, and install the unit in well-ventilated condition. Make sure to allow a space of at least 10 cm behind, on the both sides and above the top panel of the unit. Otherwise it may not only damage the unit, but also cause fire.

6. Always set the VOLUME control to “0” before starting the audio source play. Increase the volume gradually to an appropriate level after playback has been started.

7. Do not attempt to clean the unit with chemical solvents; this might damage the finish. Use a clean, dry cloth.

8. Be sure to read the “TROUBLESHOOTING” section regarding common operating errors before concluding that the unit is faulty.

9. When not planning to use this unit for long periods of time (ie., vacation, etc.), disconnect the AC power plug from the wall outlet.

10. To prevent lightning damage, disconnect the AC power plug and disconnect the antenna cable when there is an electrical storm.

11. Grounding or polarization – Precautions should be taken so that the grounding or polarization of an appliance is not defeated.

12. AC outlet
    Do not connect audio equipment to the AC outlet on the rear panel if that equipment requires more power than the outlet is rated to provide.

IMPORTANT
Please record the serial number of this unit in the space below.

Serial No.:

The serial number is located on the rear of the unit. Retain this Owner’s Manual in a safe place for future reference.

WARNING
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

FOR CANADIAN CUSTOMERS

TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT AND FULLY INSERT.

THIS CLASS B DIGITAL APPARATUS MEETS ALL REQUIREMENTS OF THE CANADIAN INTERFERENCE-CAUSING EQUIPMENT REGULATIONS.

The apparatus is not disconnected from the AC power source as long as it is connected to the wall outlet, even if the apparatus itself is turned off.

SUPPLIED ACCESSORIES

After unpacking, check that the following parts are included.

AM Loop Antenna 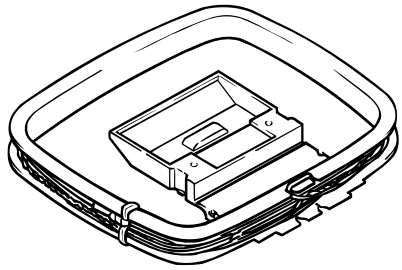	Remote Control Transmitter 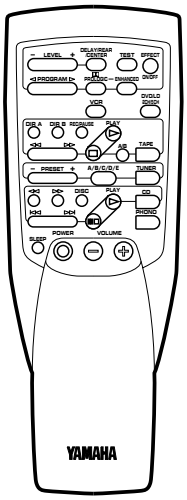
Indoor FM Antenna 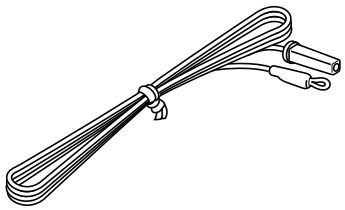	Batteries (size AA, R6, UM-3) 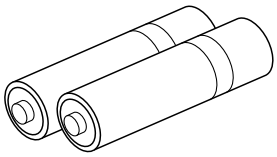

FEATURES

- **5 Speaker Configuration**
  Front: 45W + 45W (8Ω) RMS Output Power, 0.04% THD, 20–20,000 Hz
  Center: 45W (8Ω) RMS Output Power, 0.1% THD, 1 kHz
  Rear: 15W (8Ω) RMS Output Power, 0.7% THD, 1 kHz

- **Digital Sound Field Processor**
  4 Programs for Digital Sound Field Processing
  2 Programs for Dolby Surround Decoding (DOLBY PRO LOGIC and DOLBY PRO LOGIC ENHANCED)

- **Automatic Input Balance Control for Dolby Pro Logic Surround**

- **Test Tone Generator for Easier Speaker Balance Adjustment**

- **3 Center Channel Modes (NORMAL/WIDE/PHANTOM)**

- **40-Station Random Access Preset Tuning**

- **Automatic Preset Tuning**

- **Preset Station Shifting Capability (Preset Editing)**

- **IF Count Direct PLL Synthesizer Tuning System**

- **Video Signal Input/Output Capability**

- **5-Channel Discrete Input Terminals for Connecting with a Dolby Digital (AC-3) Decoder**

- **SLEEP Timer**

- **Remote Control Capability**

<Europe and U.K. models only>

- **Multi-Functions for RDS Broadcast Reception**

PROFILE OF THIS UNIT

You are the proud owner of a Yamaha stereo receiver –an extremely sophisticated audio component. The Digital Sound Field Processor (DSP) built into this unit takes advantage of Yamaha's undisputed leadership in the field of digital audio processing to bring you a whole new world of listening experiences. Follow the instructions in this manual carefully when setting up your system, and this unit will sonically transform your room into a wide range of listening environments –movie theater, concert hall, and so on. In addition, you get incredible realism from sources encoded with Dolby Surround using the built-in Dolby Pro Logic Surround Decoder.
Please read this operation manual carefully and store it in a safe place for later reference.

Digital Sound Field Processing

What is it that makes live music so good? Today's advanced sound reproduction technology lets you get extremely close to the sound of a live performance, but chances are you'll still notice something missing: the acoustic environment of the live concert hall. Extensive research into the exact nature of the sonic reflections that create the ambience of a large hall has made it possible for Yamaha engineers to bring you this same sound in your own listening room, so you'll feel all the sound of a live concert.

Furthermore, our technicians, armed with sophisticated measuring equipment, have even made it possible to capture the acoustics of a variety of venues such as an actual concert hall, theater, etc. to allow you to accurately recreate one of several actual live performance environments, all in your own home.

Dolby Pro Logic Surround

This unit employs a Dolby Pro Logic Surround decoder similar to professional Dolby Stereo decoders used in many movie theaters. By using the Dolby Pro Logic Surround decoder, you can experience the dramatic realism and impact of Dolby Surround movie theater sound in your own home. Dolby Pro Logic employs a four channel five speaker system. The Pro Logic Surround system divides the input signal into four levels: the left and right main channels, the center channel (used for dialog), and the rear surround sound channels (used for sound effects, background noise, and other ambient noises). The center channel allows listeners seated in even less-than-ideal positions to hear the dialog originating from the action on the screen while experiencing good stereo imaging.
Dolby Surround is encoded on the sound track of pre-recorded video tapes, laser discs, and some TV/cable broadcasts. When you play a source encoded with Dolby Surround on this unit, the Dolby Pro Logic Surround decoder decodes the signal and distributes the surround-sound effects.

This Dolby Pro Logic Surround Decoder employs a digital signal processing system. This system improves the stability of sound at each channel and minimizes crosstalk between channels, so that positioning of sounds around the room is more accurate compared with conventional analog signal processing systems.
In addition, this unit features a built-in automatic input balance control. This always assures you the best performance without manual adjustment.

Manufactured under license from Dolby Laboratories Licensing Corporation. "Dolby", the double-D symbol and "Pro Logic" are trademarks of Dolby Laboratories Licensing Corporation.

Dolby Pro Logic Surround + DSP

Dolby Surround sound system shows its full ability in a large movie theater, because movie sounds are originally designed to be reproduced in a large movie theater using many speakers. It is difficult to create a sound environment similar to that of a movie theater in your listening room, because the room size, materials of inside walls, the number of speakers, etc. of your listening room is much different from those of a movie theater.

Yamaha DSP technology made it possible to present you with nearly the same sound experience as that of a large movie theater in your listening room by compensating for lack of presence and dynamics in your listening room with its original digital sound fields combined with Dolby Surround sound field. The combination of Dolby Pro Logic Surround and DSP is used on the sound field program " DOLBY PRO LOGIC ENHANCED".

SPEAKER SETUP

SPEAKERS TO BE USED

This unit is designed to provide the best sound-field quality with a 5 speaker configuration. The most effective speakers to use with this unit are front speakers, rear speakers and a center speaker. You may omit the center speaker. (Refer to the "**4-Speaker Configuration**" shown below.)
The front speakers are used for the main source sound plus the effect sounds. They will probably be the speakers from your present stereo system. The rear speakers are used for the effect and surround sounds, and the center speaker is for the center sounds (dialog etc.) within programs encoded with Dolby Surround. The center speaker needs to be equal in power to the front speakers, although the rear speakers should not be equal. However, all the speakers should have high enough power handling to accept the maximum output of this unit.

SPEAKER CONFIGURATION

5-Speaker Configuration

This configuration is the most effective and recommended one. In this configuration, the center speaker is necessary as well as the rear speakers. If the program **DOLBY PRO LOGIC** or **DOLBY PRO LOGIC ENHANCED** is selected, conversations will be output from the center speaker and the ambience will be excellent.

- Set the center channel mode to the "**NORMAL**" or "**WIDE**" position. (For details, refer to page 18.)

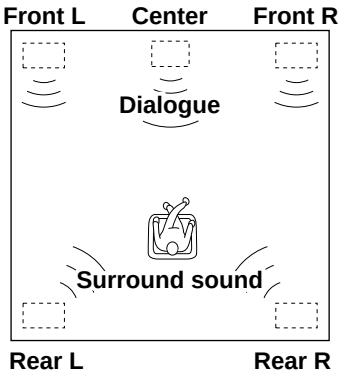

4-Speaker Configuration

The center speaker is not used in this configuration. If the program **DOLBY PRO LOGIC** or **DOLBY PRO LOGIC ENHANCED** is selected, the center sound is output from the left and the right front speakers. However, the sound effect of other programs can be the same as that of the 5-speaker configuration.

- Be sure to set the center channel mode to the "**PHANTOM**" position. (For details, refer to page 18.)

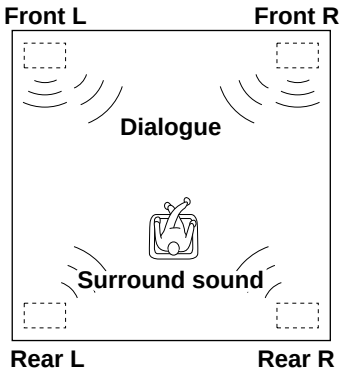

SPEAKER PLACEMENT

The recommended speaker configuration, the 5-speaker configuration, will require two speaker pairs: **front speakers** (your normal stereo speakers), and **rear speakers**, plus a **center speaker**. When you place these speakers, refer to the following.

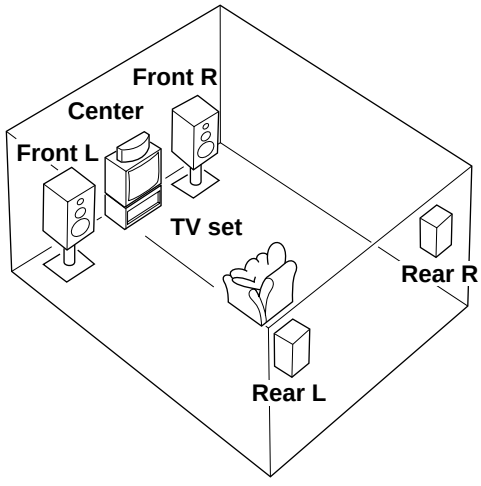

Front: In normal position. (The position of your present stereo speaker system.)
Rear: Behind your listening position, facing slightly inward. Nearly six feet (approx. 1.8 m) up from the floor.
Center: Precisely between the front speakers. (To avoid interference with TV sets, use a magnetically shielded speaker.)

CONNECTIONS

Before attempting to make any connections to or from this unit, be sure to first switch OFF the power to this unit and to any other components to which connections are being made.

CONNECTIONS WITH OTHER COMPONENTS

When making connections between this unit and other components, be sure all connections are made correctly, that is to say **L** (left) to **L**, **R** (right) to **R**, "**+**" to "**+**" and "**–**" to "**–**". Also, refer to the owner's manual for each component to be connected to this unit.

* If you have YAMAHA components numbered as 1, 2, 3, etc. on the rear panel, connections can be made easily by making sure to connect the output (or input) terminals of each component to the same-numbered terminals of this unit.

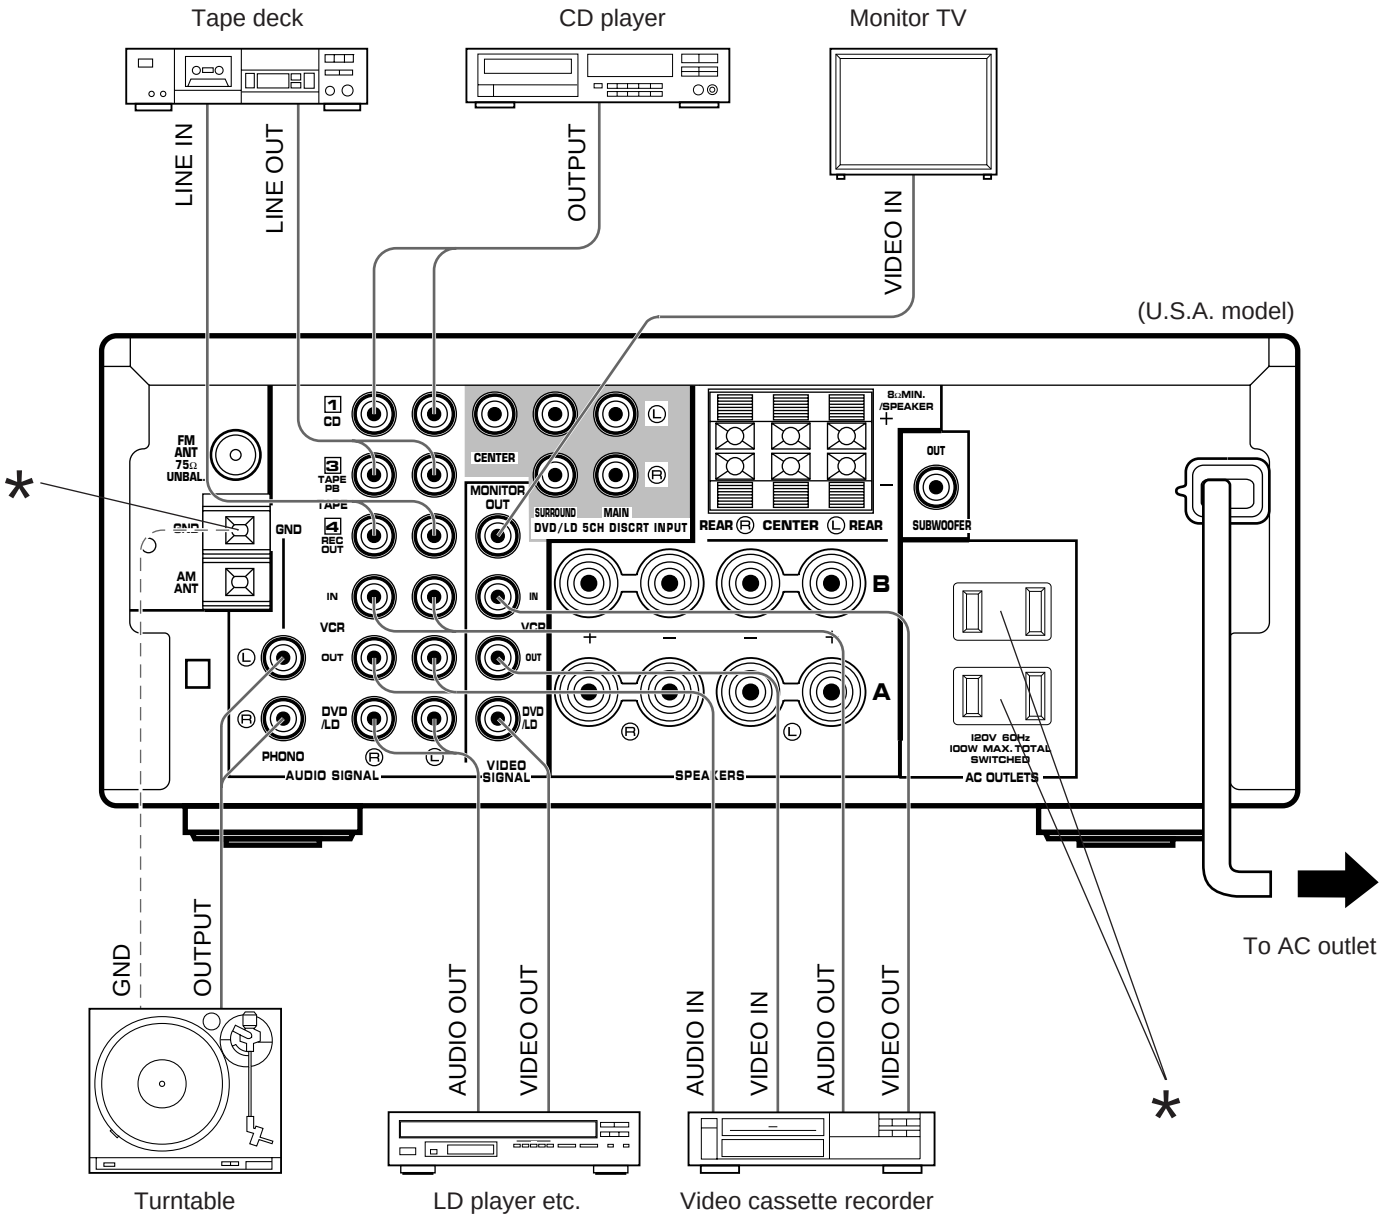

✱ : Refer to "**ABOUT THE ACCESSORY TERMINALS**" on page 10.

Connecting with a Dolby Digital (AC-3) Decoder

If you have a Dolby Digital (AC-3) Decoder unit or an LD player etc. which incorporates a Dolby Digital (AC-3) Decoder, its discrete outputs can be connected to this unit.

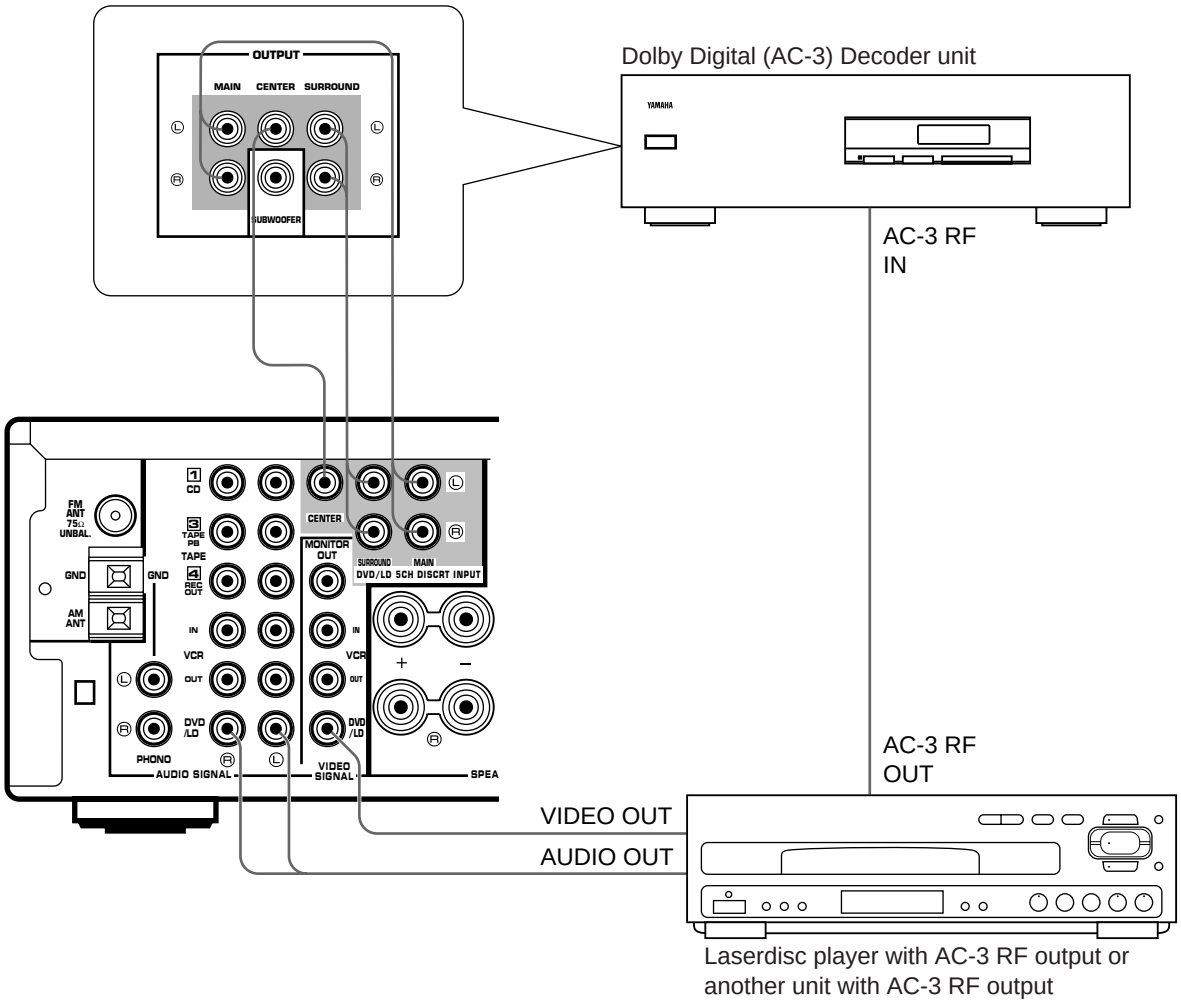

Notes

- The laserdisc player with AC-3 RF output (or another unit with AC-3 RF output) must be also connected to the DVD/LD AUDIO SIGNAL input terminals of this unit for playing a source with the Dolby Pro Logic Surround decoded or in normal stereo (or monaural).
- The discrete signals input to this unit cannot be recorded by a tape deck or VCR. To record a source played on the laserdisc player with AC-3 RF output (or another unit with AC-3 RF output), it must be connected to the DVD/LD AUDIO/VIDEO SIGNAL input terminals of this unit.

CONNECTING SPEAKERS

Note
Use speakers with the specified impedance shown on the rear of this unit.

Note on front speaker connections:
One or two speaker systems can be connected to this unit. If you use only one speaker system, connect it to either the **SPEAKERS A** or **B** terminals.

Note on a subwoofer connection:
You may wish to add a subwoofer to reinforce the bass frequencies.
Connect the **SUBWOOFER OUT** terminal of this unit to the INPUT terminal of the subwoofer amplifier, and connect the speaker terminals of the subwoofer amplifier to the subwoofer. With some subwoofers, including the Yamaha Active Servo Processing Subwoofer System, the amplifier and subwoofer are in the same unit.

* The **SUBWOOFER OUT** terminal is for output to a monaural amplifier driving a subwoofer. Only frequencies below 200 Hz from the front and center channels are output.

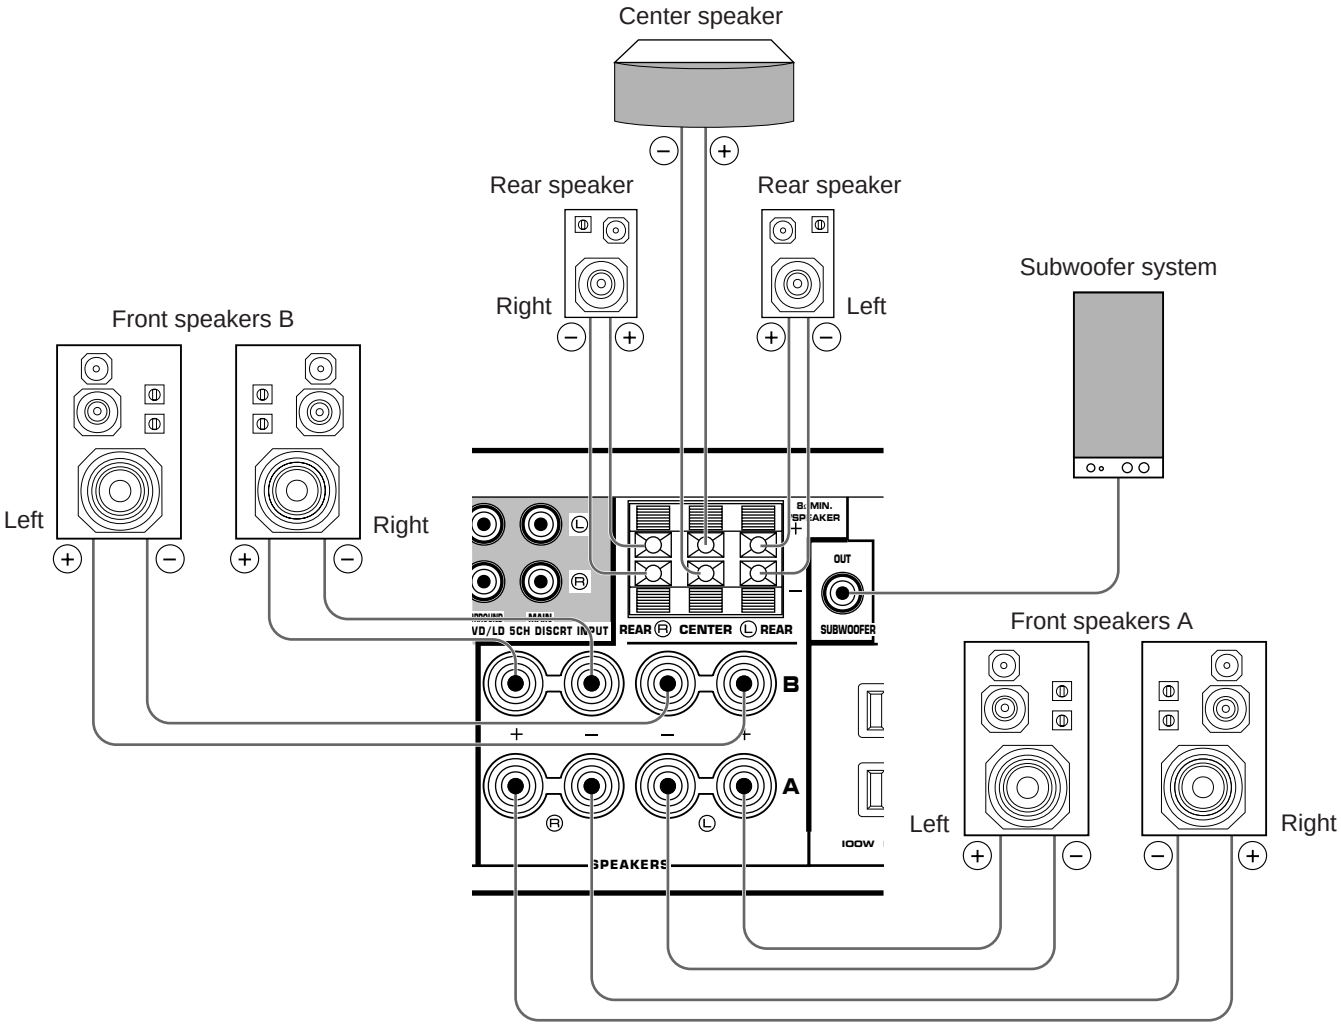

How to Connect:

Connect the **SPEAKERS** terminals to your speakers with wire of the proper gauge, cut as short as possible. If the connections are faulty, no sound will be heard from the speakers. Make sure that the polarity of the speaker wires is correct, that is the + and – markings are observed. If these wires are reversed, the sound will be unnatural and lack bass.

Caution

Do not let the bare speaker wires touch each other and do not let them touch any metal part of this unit. This could damage this unit and/or speakers.

For connecting to the FRONT SPEAKERS terminals

Red: positive (+)
Black: negative (–)

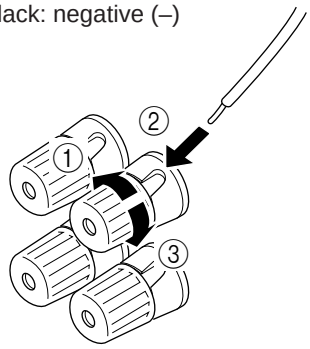

① Unscrew the knob.
② Insert the bare wire. [Remove approx. 5mm (1/4") insulation from the speaker wires.]
③ Tighten the knob and secure the wire.

<U.S.A. and General models only>

Banana Plug connections are also possible. Simply insert the Banana Plug connector into the corresponding terminal.

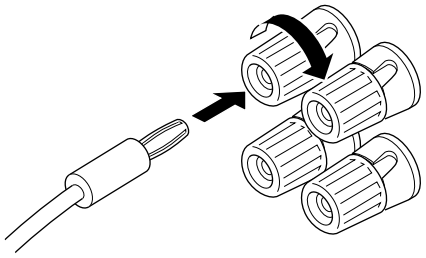

For connecting to the REAR and CENTER SPEAKERS terminals

Red: positive (+)
Black: negative (–)

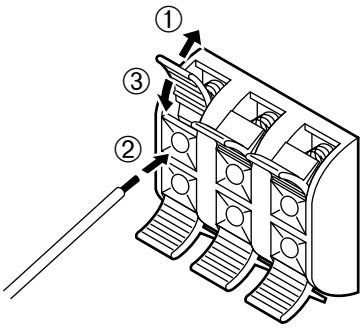

① Press the tab.
② Insert the bare wire. [Remove approx. 5mm (1/4") insulation from the speaker wires.]
③ Release the tab and secure the wire.

ABOUT THE ACCESSORY TERMINALS

AC OUTLET(S) (SWITCHED)

(U.S.A., Europe and General models)
..... 2 SWITCHED OUTLETS
(U.K. model) ..... 1 SWITCHED OUTLET
Use these to connect the power cords from your components to this unit.
The power to the **SWITCHED** outlets is controlled by this unit's **POWER** switch or the provided remote control transmitter's **POWER** key. These outlets will supply power to any component whenever this unit is turned on.
The maximum power (total power consumption of components) that can be connected to the **SWITCHED AC OUTLET(S)** is 100 watts.

GND terminal (For turntable use)

Connecting the ground wire of the turntable to the **GND** terminal will normally minimize hum, but in some cases better results may be obtained with the ground wire disconnected.

Note

Even if you make this connection, never fail to make other wire connections to this terminal. (See page 11.)

ANTENNA CONNECTIONS

- Each antenna should be connected to the designated terminals correctly, referring to the following diagram.
- Both AM and FM indoor antennas are included with this unit. In general, these antennas will probably provide sufficient signal strength. Nevertheless, a properly installed outdoor antenna will give clearer reception than an indoor one. If you experience poor reception quality, an outdoor antenna may result in improvement.

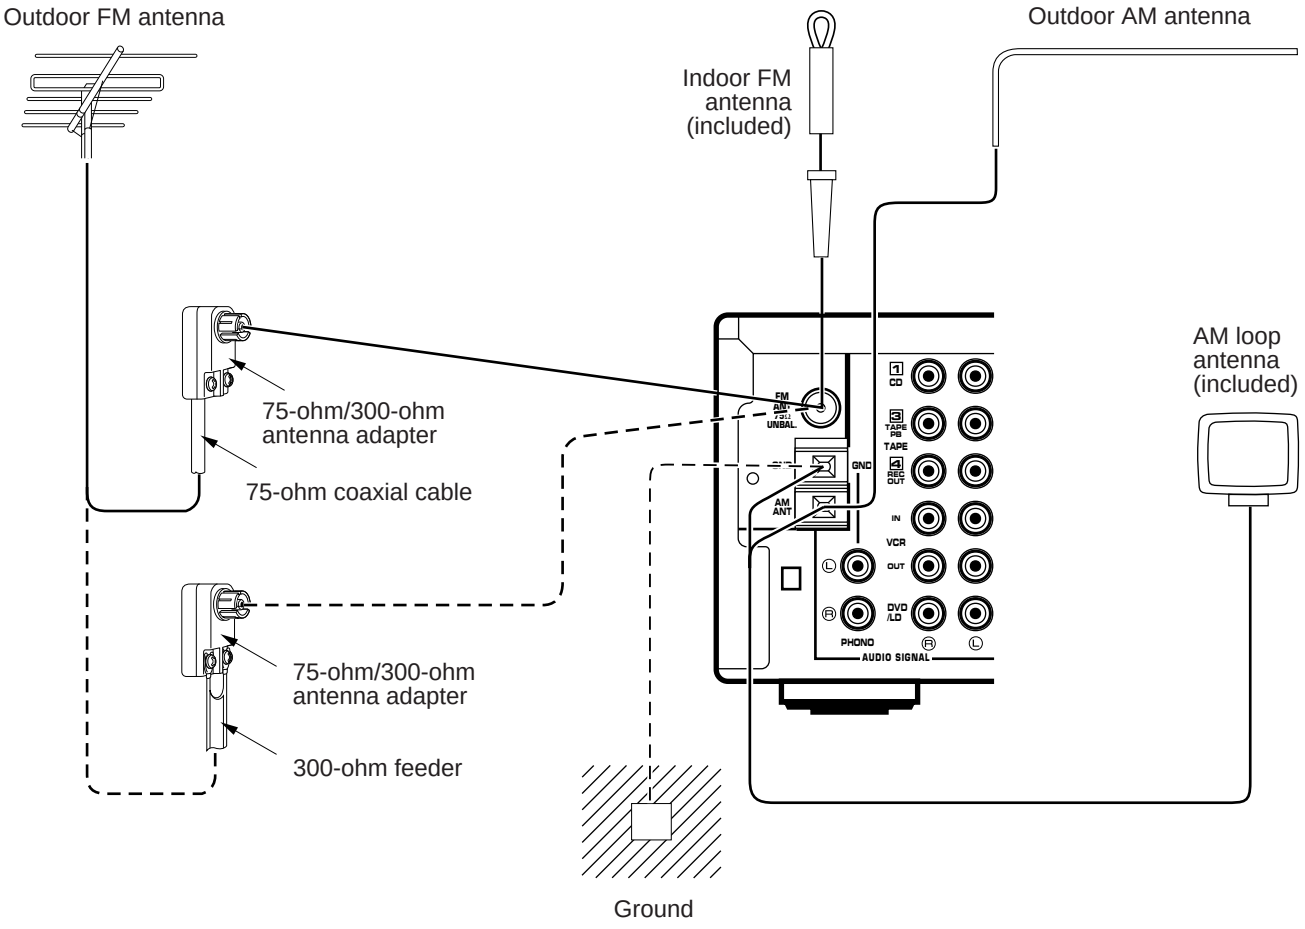

Connecting the AM loop antenna

1 **2** **3**

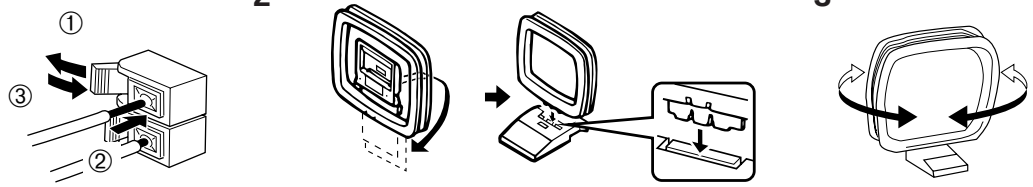

Orient so that the best reception is obtained.

* The AM loop antenna should be placed apart from the main unit. The antenna may be hung on a wall.
* The AM loop antenna should be kept connected, even if an outdoor AM antenna is connected to this unit.

GND terminal

For maximum safety and minimum interference, connect the **GND** terminal to a good earth ground. A good earth ground is a metal stake driven into moist earth.

Notes

- When connecting the indoor FM antenna, insert its connector into the **FM ANT** terminal firmly.
- If you need an outdoor FM antenna to improve FM reception quality, either 300-ohm feeder or coaxial cable may be used. In locations troubled by electrical interference, coaxial cable is preferable.

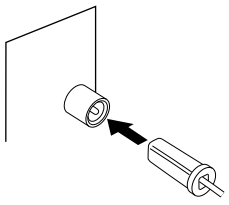

CONTROLS AND THEIR FUNCTIONS

FRONT PANEL

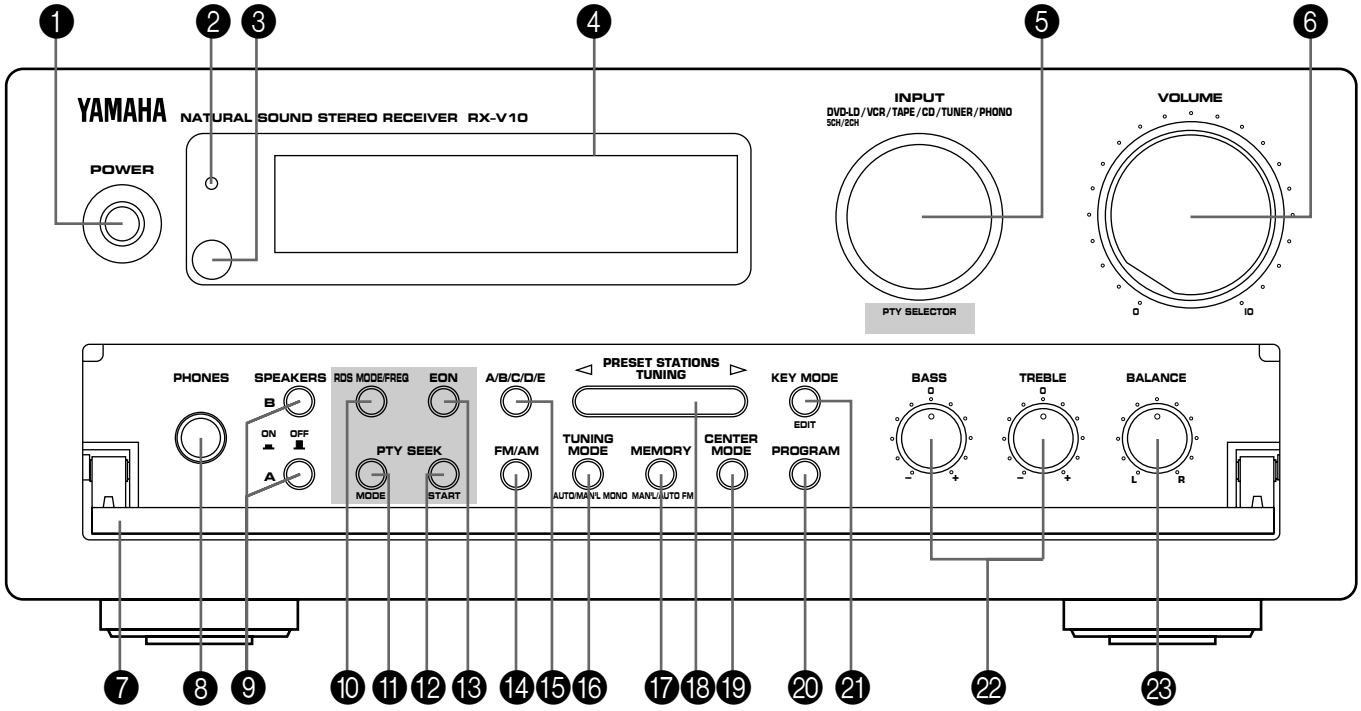

Parts in the shaded areas are provided for Europe and U.K. models only.
The power indicator (❷) is provided for Europe, U.K. and General models only.

❶ POWER switch
Press this switch to switch the power on. Press it again to switch the power off.

❷ Power indicator
<Europe, U.K. and General models only>
Lights up fully while the power is on.
* Standby mode
While the power is on, pressing the **POWER** key on the remote control transmitter switches the unit to the standby mode. In this mode, the power indicator is half illuminated.

❸ Remote control sensor
Receives signals from the remote control transmitter.

❹ Display panel
Shows station frequencies and various information. (Refer to page 16 for details.)

❺ INPUT selector
Selects a program source to listen to and/or watch. When turned, the name of a selected source appears on the display.

PTY SELECTOR
<Europe and U.K. models only>
When this unit is in the PTY SEEK mode, turning this control changes the currently selected program type.

❻ VOLUME control
Used to raise or lower the volume level.

❼ Control door
See page 13 for how to open and close the control door.

❽ PHONES jack
When you listen with headphones, connect the headphones to the **PHONES** jack. You can listen to the sound to be output from the front speakers through headphones.
When listening with headphones privately, set both the **SPEAKERS A** and **B** switches to the **OFF** position and switch off the digital sound field processor (so that no DSP program name is illuminated on the display) by pressing the **EFFECT** key.

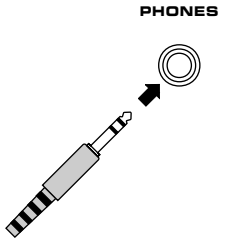

❾ SPEAKERS switches
Set the switch **A** or **B** (or both **A** and **B**) for the front speaker system (connected to this unit) you will use to the **ON** position. Set the switch for the front speaker system you will not use to the **OFF** position.

⑩ RDS MODE/FREQ button
<Europe and U.K. models only>
When an RDS station is received, pressing this button changes the display mode into the PS mode, PTY mode and/or RT mode (if the station employs those RDS data services), and frequency display in turn.

⑪ PTY SEEK MODE button
<Europe and U.K. models only>
When this button is pressed, the unit turns into the PTY SEEK mode.

⑫ PTY SEEK START button
<Europe and U.K. models only>
Press this button to begin searching for a station after the desired program type is selected in the PTY SEEK mode.

⑬ EON button
<Europe and U.K. models only>
Press this button to select a desired program type (NEWS, INFO, AFFAIRS, SPORT) when you want to call a radio program of that program type automatically.

⑭ FM/AM buttons
Press this button to switch the reception band to FM or AM.

⑮ A/B/C/D/E button
Press this button to select a desired group (A–E) of preset stations.

⑯ TUNING MODE (AUTO/MAN'L MONO) button
Press this button to switch the tuning mode to automatic or manual. To select the automatic tuning mode, press this button so that "AUTO" lights up on the display. To select the manual tuning mode, press this button so that "AUTO" goes off.

⑰ MEMORY (MAN'L/AUTO FM) button
When this button is pressed, the MEMO indicator flashes for about 5 seconds. During this period, select a desired preset station number by pressing the **PRESET STATIONS** button once or more, and then press the **MEMORY** button once again to enter the displayed station into the memory.
When this button is pressed and held for about 3 seconds, the automatic preset tuning begins. (Refer to page 24 for details.)

⑱ PRESET STATIONS/TUNING button
Functions as the **PRESET STATIONS** button when "PRESET" is illuminated on the display, and functions as the **TUNING** button when "PRESET" is not illuminated on the display.

PRESET STATIONS:
Selects a preset station number (from 1 to 8) whenever the left or the right side of this button is pressed.

TUNING:
Used for tuning. Press the ▻ side to tune in to higher frequencies, and press the ◅ side to tune in to lower frequencies.

⑲ CENTER MODE button
Selects a center channel output mode (NORMAL, WIDE or PHANTOM). (For details, refer to page 18.)

⑳ PROGRAM button
Whenever this button is pressed, the built-in digital sound field processor turns on and the currently selected DSP program changes sequentially and then the digital sound field processor turns off, and those are repeated.

㉑ KEY MODE/EDIT button
Whenever this button is pressed, "PRESET" appears and disappears on the display alternately. This is for switching the function of the **PRESET STATIONS/TUNING** button.
This button is also used to exchange the places of two preset stations with each other.

㉒ Tone controls
BASS
Used to increase or decrease the low frequency response. The 0 position produces flat response.
TREBLE
Used to increase or decrease the high frequency response. The 0 position produces flat response.

㉓ BALANCE control
Adjusts the balance of the output volume to the left and right speakers to compensate for sound imbalance caused by speaker location or listening room conditions.

Open/close the control door

When it is not necessary to operate controls inside the control door, close the door.

To open the door

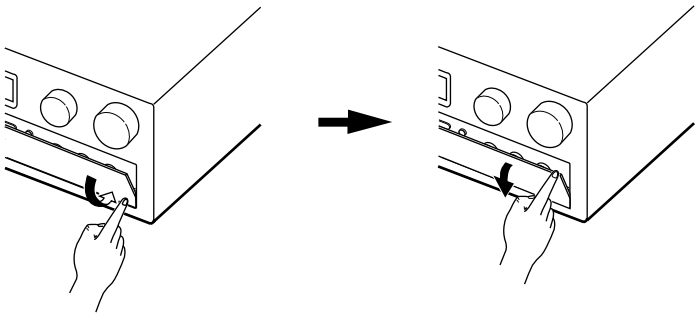

To close the door

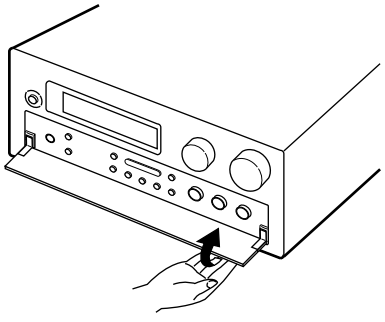

REMOTE CONTROL TRANSMITTER

The remote control transmitter provided with this unit is designed to control all the most commonly used functions of this unit. If the CD player and tape deck connected to this unit are YAMAHA components designed for remote control compatibility, then this remote control transmitter will also control various functions of each component.

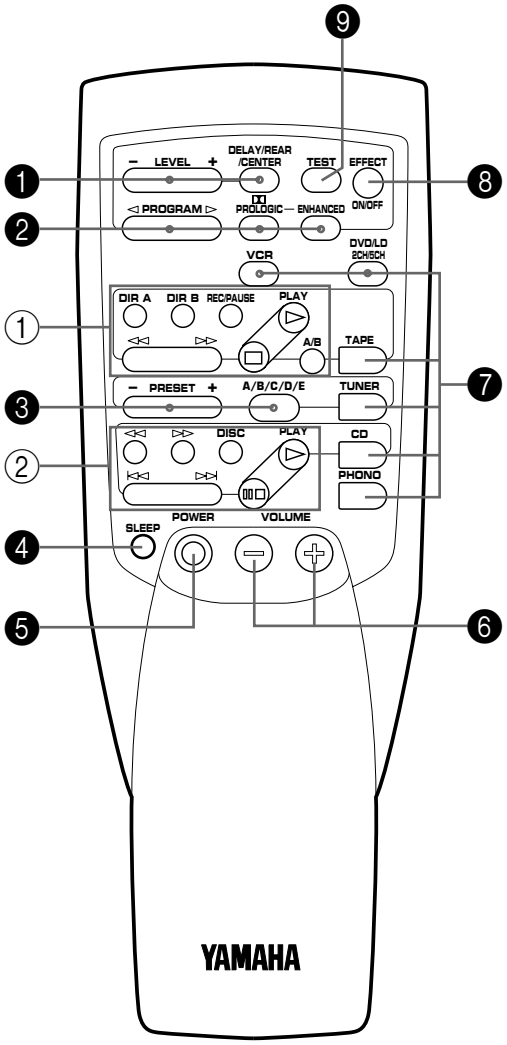

For Control of This Unit

❶ DELAY/REAR/CENTER and LEVEL +/– keys
Adjust the delay time (DELAY), the rear channel output level (REAR) and center channel output level (CENTER).
(For details, refer to page 33 and 34.)

❷ Program selector keys

PROGRAM:
When the built-in digital sound field processor is on, this key changes the currently selected DSP program whenever the right or left side of this key is pressed.

PROLOGIC:
Directly selects the **PRO LOGIC** program.

ENHANCED:
Directly selects the **PRO LOGIC ENHANCED** program.

❸ Tuner keys
Controls tuner.
+: Selects higher preset station number.
–: Selects lower preset station number.
A/B/C/D/E: Selects the group (A – E) of preset station numbers.

❹ SLEEP timer key
The power to this unit is automatically turned off one hour after this key is pressed (so that “SLEEP” lights up on the display).

❺ POWER key
Turns the power on/off.
* **<Europe, U.K. and General models only>**
While the power is on, pressing the **POWER** key on the remote control transmitter switches the unit from the power-on mode to the standby mode, and vice versa. (In the standby mode, the power indicator on the front panel is half illuminated.)

❻ VOLUME +/– keys
Turns the volume level up/down.

❼ Input selector keys
Selects input source.

❽ EFFECT ON/OFF key
Switches on/off the digital sound field processor (DSP).

❾ TEST key
Used for speaker balance adjustment. (For details, refer to page 17, 18 and 19.)

For Other Component Control

Identify the remote control transmitter keys with your component's keys. If these keys are identical, their functions will be the same. On each key function, refer to the corresponding instruction on your component's manual.

① **Tape deck keys**
Controls tape deck.
* **DIR A, B** and **A/B** are applicable only to double cassette tape deck.
* For a single cassette deck with automatic reverse function, pressing **DIR A** will reverse the direction of tape running.

② **CD player keys**
Controls compact disc player.
* **DISC** is applicable only to compact disc changer.

NOTES ABOUT THE REMOTE CONTROL TRANSMITTER

Battery installation

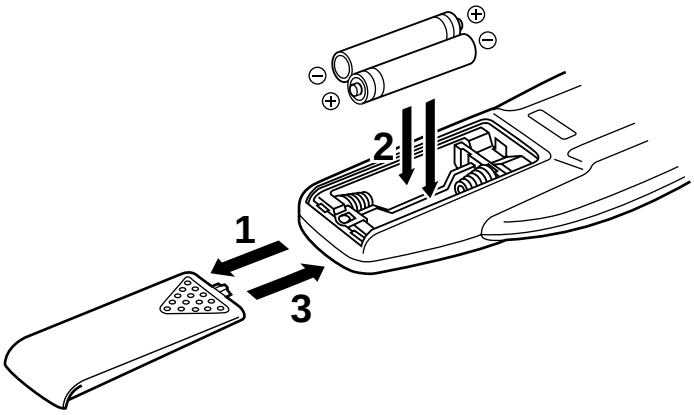

Battery replacement

If you find that the remote control transmitter must be used closer to the main unit, the batteries are weak. Replace both batteries with new ones.

Notes
- Use only AA, R6, UM-3 batteries for replacement.
- Be sure the polarities are correct. (See the illustration inside the battery compartment.)
- Remove the batteries if the remote control transmitter will not be used for an extended period of time.
- If batteries leak, dispose of them immediately. Avoid touching the leaked material or letting it come in contact with clothing, etc. Clean the battery compartment thoroughly before installing new batteries.

Remote control transmitter operation range

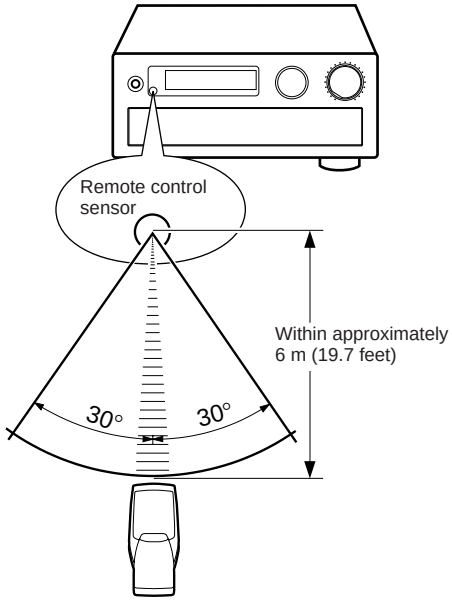

Notes
- There should be no large obstacles between the remote control transmitter and the main unit.
- If the remote control sensor is directly illuminated by strong lighting (especially an inverter type of fluorescent lamp etc.), it might cause the remote control transmitter not to work correctly. In this case, reposition the main unit to avoid direct lighting.

DISPLAY PANEL

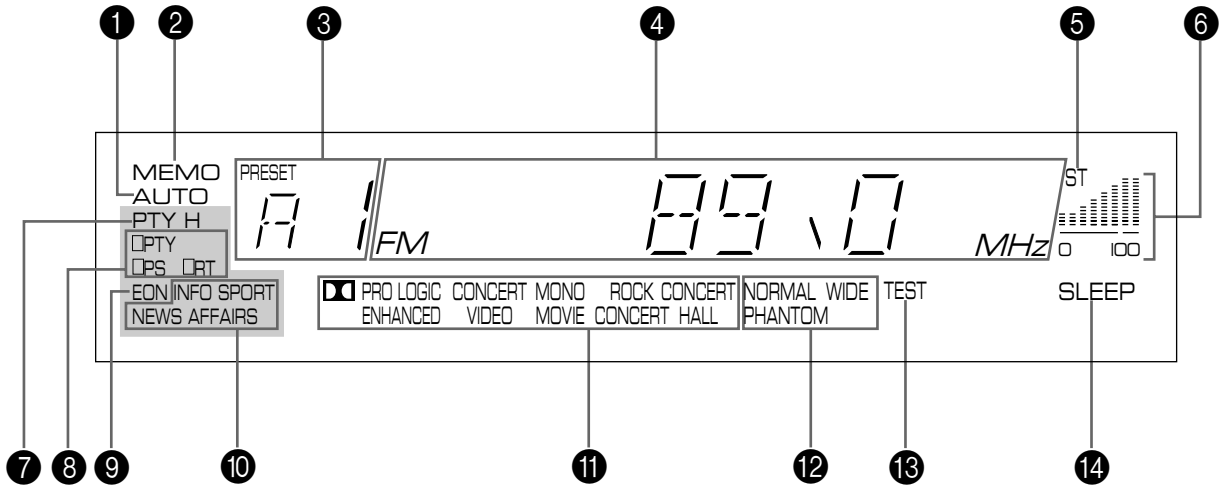

Indicators in the shaded area are provided for Europe and U.K. models only.

1 AUTO indicator
Lights up when this unit is in the automatic tuning mode.

2 MEMO indicator
When the **MEMORY** button is pressed, this indicator flashes for about 5 seconds. During this period, the displayed station can be programmed to the memory by using the **A/B/C/D/E** button and the **PRESET STATIONS** button.

3 Preset station number indicator
Shows the selected group (A–E) and preset station number (1–8).

4 Multi-information display
Displays various information, for example station frequency and name of the selected source.

5 STEREO indicator
Lights up when an FM stereo broadcast with sufficient signal strength is received.

6 Signal-level meter
Indicates the signal level of the received station.
If multipath interfernce is detected, the indication decreases.

7 PTY H (HOLD) indicator
<Europe and U.K. models only>
Lights up while the search is performed in the PTY SEEK mode.

8 RDS mode indicators
<Europe and U.K. models only>
The name(s) of RDS mode(s) employed by the currently received RDS station light(s) up. Illumination of the indicator on the head of a name shows that the corresponding RDS mode is now selected.

9 EON indicator
<Europe and U.K. models only>
Lights up when an RDS station that employs the EON data service is received.

10 Program type name indicators
<Europe and U.K. models only>
The name selected in the EON mode lights up.

11 DSP program indicators
The name of a selected DSP program lights up when the built-in digital sound field processor is on.

12 Center channel mode indicators
The name of a selected center channel mode lights up only when the **DOLBY PRO LOGIC** or **DOLBY PRO LOGIC ENHANCED** program is selected.

13 TEST indicator
Flashes when the built-in test-tone generator is functioning (when the test-tone is output from speakers).

14 SLEEP indicator
Lights up while the built-in SLEEP timer is functioning.

SPEAKER BALANCE ADJUSTMENT

This procedure lets you adjust the sound output level balance between the front, center, and rear speakers using the built-in test tone generator. When this adjustment is performed, the sound output level heard at the listening position will be the same from each speaker. This is important for the best performance of the digital sound field processor.

The adjustment of each speaker output level should be done at your listening position with the remote control transmitter. Otherwise, the result may not be satisfactory.

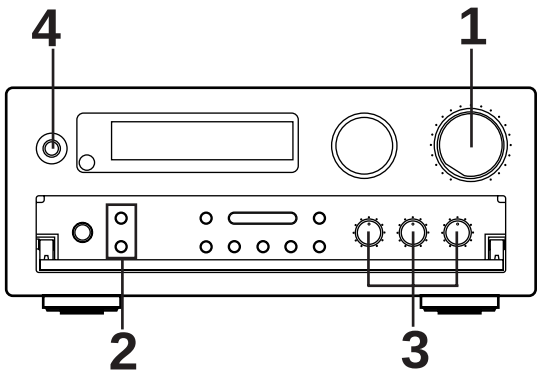

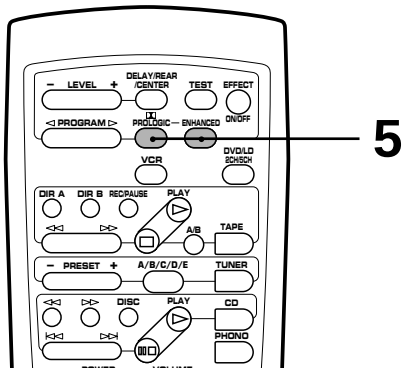

1

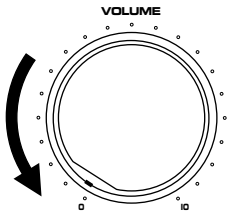

Set to the “0” position.

2 Select the front speakers to be used.

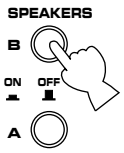

* If you use two front speaker systems, press both the A and B switches.

3

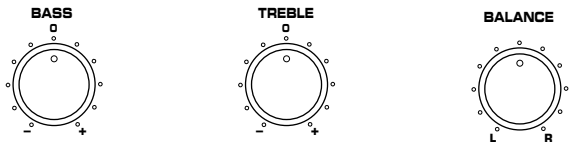

Set to the “0” position.

4 Turn the power on.

5 Select the DD PRO LOGIC or DD PRO LOGIC ENHANCED program, so that the corresponding name lights up on the display.

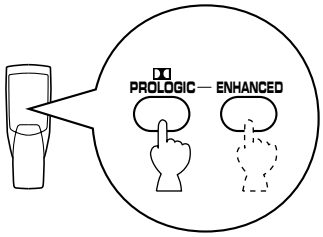

CONTINUED